
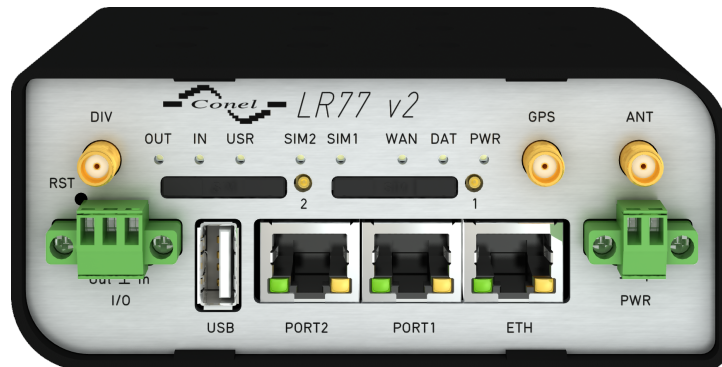


LTE Industrial Router

LR77 v2

USER MANUAL

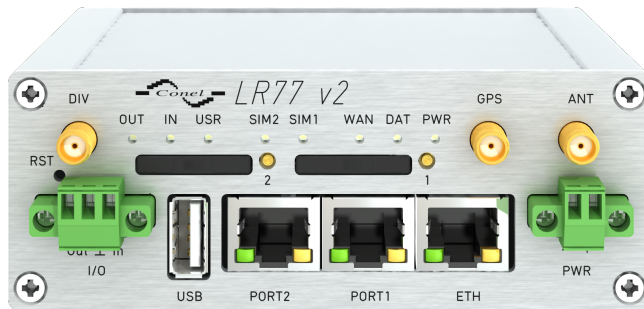

B+B SMARTWORX

Powered by

ADVANTECH

Used symbols



Danger – Information regarding user safety or potential damage to the router.



Attention – Problems that can arise in specific situations.



Information, notice – Useful tips or information of special interest.

GPL licence

Source codes under GPL licence are available free of charge by sending an email to:
cellularsales@advantech-bb.com.



Contents

1	Safety Instructions	2
2	WEEE directive	3
3	Router Description	4
4	Contents of Package	5
5	Router Design	6
5.1	Router versions	6
5.2	Delivery identification	7
5.3	Order codes	8
5.3.1	Basic versions	8
5.3.2	Full version	8
5.4	Basic dimensions of the router box	9
5.4.1	Plastic box	9
5.4.2	Metal box	9
5.5	Mounting recommendations	10
5.6	Removing from the DIN rail	12
5.7	Description of the front panel	13
5.7.1	Status indication	14
5.7.2	Power connector PWR	15
5.7.3	Antenna connector ANT, DIV and GPS (alternatively WIFI or WMBUS)	16
5.7.4	SIM card reader	17
5.7.5	Ethernet Port ETH	18
5.7.6	PORT1	19
5.7.7	PORT2	19
5.7.8	USB Port	20
5.7.9	I/O Port	20
5.7.10	Reset	22
6	First Use	23
6.1	Connecting the router before first use	23
6.2	Start	24
6.3	Configuration	24
6.3.1	Configuration over web browser	24
6.3.2	Configuration over Telnet	25
7	Technical Parameters	26

7.1	Basic parameters	26
7.2	Standards and regulations	27
7.2.1	Versions LR77 v2B and LR77 v2F	27
7.2.2	Versions LR77 v2BG and LR77 v2FG	27
7.2.3	Versions LR77 v2B L45	27
7.3	Technical parameters of module	28
7.3.1	Versions LR77 v2B and LR77 v2F	28
7.3.2	Versions LR77 v2BG and LR77 v2FG	28
7.3.3	LTE module supports 450 MHz	29
7.4	Technical parameters of GPS	30
7.5	Technical parameters of processor	31
7.6	Technical parameters of I/O port	31
7.7	Technical parameters of expansion port	31
8	Recommended Literature	32
9	Troubleshooting	33
9.1	FAQ	33
10	Customers Support	35

List of Figures

1	Contents of package	5
2	Front panel LR77 v2B(G)	6
3	Front panel LR77 v2F(G)	6
4	Front panel LR77 v2B L45	6
5	Front panel LR77 v2B(G) SL	6
6	Front panel LR77 v2F(G) SL	6
7	Front panel LR77 v2B L45 SL	6
8	Label LR77 v2B	7
9	Label LR77 v2B SL	7
10	Label LR77 v2F	7
11	Label LR77 v2F SL	7
12	Basic dimensions of plastic box (bottom and front view)	9
13	Basic dimensions of metal box (bottom and front view)	9
14	Space around antennas (plastic)	10
15	Space around antennas (metal)	10
16	Cable routing (plastic)	11
17	Cable routing (metal)	11
18	Space in front of connectors (plastic)	11
19	Space in front of connectors (metal)	11
20	Default position of DIN holder	12
21	Removing from the DIN rail	12
22	Front panel LR77 v2F(G)	13
23	Power connector	15
24	Connection of power supply	15
25	Connecting of the antenna	16
26	Ejected SIM holder	17
27	Ethernet connector	18
28	Connection of ethernet cable	18
29	PORT1 cable connection	19
30	PORT2 cable connection	20
31	USB connector	20
32	I/O connector	21
33	Connection of I/O cable	21
34	Connection of input and output to the router	21
35	Router reset	22
36	Router connection	23
37	Entering the IP address of the router	24
38	Entering login information	24
39	Router web interface	25

List of Tables

1	Router versions	6
2	Delivery identification	7
3	Ordering codes for Basic versions	8
4	Ordering codes of full version	8
5	Front panel description	13
6	Status indication	14
7	Connection of power connector	15
8	Connection of Ethernet connector	18
9	Connection of USB connector	20
10	Connection of I/O port	20
11	Description of reset and restart router	22
12	Basic parameters	26
13	Versions LR77 v2B and LR77 v2F	27
14	Versions LR77 v2BG and LR77 v2FG	27
15	Versions LR77 v2B L45	27
16	Versions LR77 v2B and LR77 v2F	28
17	Versions LR77 v2BG and LR77 v2FG	29
18	Technical parameters of LTE module 450 MHz	29
19	Technical parameters of GPS	30
20	Technical parameters of processor	31
21	Technical parameters of I/O port	31

1. Safety Instructions



Please, observe the following instructions:

- The router must be used in compliance with all applicable international and national laws and in compliance with any special restrictions regulating the utilization of the router in prescribed applications and environments.
- To prevent possible injury and damage to appliances and to ensure compliance with all relevant provisions, use only the original accessories. Unauthorized modifications or the use of unapproved accessories may result in damage to the router and/or a breach of applicable regulations. Unauthorized modifications or use of unapproved accessories may void the warranty.
- The router can not be opened.
- Turn off the router and disconnect it from power supply before handling the SIM card.
- **Caution!** The SIM card could be swallowed by small children.
- Input voltage must not exceed 36 V DC max.
- Do not expose the router to extreme ambient conditions. Protect the router against dust, moisture and high temperature.
- The router should not be used in locations where flammable and explosive materials are present, including gas stations, chemical plants, or locations in which explosives are used. We remind users of the duty to observe the restrictions concerning the utilization of radio devices at such places.
- Switch off the router when traveling by plane. Utilization of the router on a plane may endanger the operation of the plane or interfere with the mobile telephone network, and may be unlawful. Failure to observe these instructions may result in the suspension or cancellation of telephone services for the respective client and/or may result in legal sanctions.
- When using the router in close proximity to personal medical devices, such as cardiac pacemakers or hearing aids, you must proceed with heightened caution.
- The router may cause interference when used in close proximity to TV sets, radio receivers or personal computers.
- It is recommended that you create an appropriate copy or backup of all important settings that are stored in the memory of the device.



2. Product Disposal Instructions

The WEEE (Waste Electrical and Electronic Equipment: 2002/96/EC) directive was introduced to ensure that electrical/electronic products are recycled using the best available recovery techniques in order to minimize impact on the environment. This product contains high quality materials and components which can be recycled. At the end of its life this product **MUST NOT** be mixed with other commercial waste for disposal. Check the terms and conditions of your supplier for disposal information.

3. Router Description

LTE router LR77 v is used to wirelessly connect various equipments and devices via Ethernet interface 10/100 to the Internet or Intranet. Thanks to high data transfer speed of up to 100 Mbit/s (download) and upload speed up to 50 Mbit/s it is an ideal wireless solution for traffic and security camera systems, individual computers, LAN networks, automatic teller machines (ATM) and other self-service terminals, etc. Routers LR77 v2B L45 are primarily intended for use in the 450 MHz band whose main advantage is the long range. The lower frequency, the less transmitters are needed for covering.

As a standard, this LTE cellular router is equipped with one Ethernet 10/100, one USB Host port, one binary Input/output (I/O) port and one SIM card. To save and backup communication data a version with two SIM cards is available. The wide range of interface options of the router further expands Port1 and Port2 expansion ports, which are selected by the customer. For Port1 are available: Ethernet port 10/100, serial interface ports RS232, RS485, RS422, MBUS or inputs/outputs (I/O – CNT). Port2 may be equipped with serial interfaces RS232, RS485, RS422, MBUS, wireless interfaces WIFI or WMBUS, SDH expansion port or inputs/outputs (I/O – CNT). Both of ports can be fitted with internal switch (exp. port SWITCH). This wireless router is supplied either in a plastic or metal casing, based on the requirements of the customer.

Configuration is done via web interface protected by password. The router supports creation of VPN tunnels using technologies IPsec, OpenVPN and L2TP to ensure safe communication. Web interface provides detail statistics about the router activities, signal strength, detailed log, etc. Cellular router supports functions: DHCP, NAT, NAT-T, DynDNS, NTP, VRRP, control by SMS and many other function.

Other diagnostic functions ensuring continuous communication include automatic inspection of PPP connection offering an automatic restart feature – in case of connection losses, or hardware watchdog which monitors the status of the router. With the help of a special window (start up script window) you may insert Linux scripts for various actions. For some applications the key option to create several different configurations for one LTE wireless router, the so-called profiles (maximum of 4), and the option to switch between them (for example via SMS, binary input status, etc.) is essential. Cellular routers LR77 v2 may automatically upgrade configuration and firmware from server. This allows mass reconfiguration of many routers in one time.

The router also supports additional software like R-SeeNet for permanent traffic monitoring of routers or communication VPN server Digiclustor.



Examples of possible applications

- mobile office
- fleet management
- security system
- telematic
- telemetric
- remote monitoring
- vending and dispatcher machines

4. Contents of Package



Basic delivered set of router includes:

- router,
- power supply,
- crossover UTP cable,
- up to three external antennas,
- clip for the DIN rail,
- paper start guide.



Figure 1: Contents of package



Temperature range for power supply is reduced to 0 °C to +40 °C!

As optional accessories can also be supplied the following expansion ports (one for Basic version or two for Full version):

- RS232, RS485/422, MBUS, ETHERNET, CNT, SWITCH, WIFI, WMBUS or SDH.
- Separation columns for mounting expansion boards are included.

5. Router Design

5.1 Router versions

LR77 v2 router is supplied in the following versions (see table below). All versions are available in plastic or metal box according to customer requirements.

Router versions	Router Box	SIM1	SIM2	I/O	USB	PORT1	PORT2	ETH
LR77 v2B(G)	Plastic	1 x		1 x	1 x	1 x		1 x
LR77 v2B(G) SL	Metal	1 x		1 x	1 x	1 x		1 x
LR77 v2B L45	Plastic	1 x		1 x	1 x	1 x		1 x
LR77 v2B L45 SL	Metal	1 x		1 x	1 x	1 x		1 x
LR77 v2F(G)	Plastic	1 x	1 x	1 x	1 x	1 x	1 x	1 x
LR77 v2F(G) SL	Metal	1 x	1 x	1 x	1 x	1 x	1 x	1 x

Table 1: Router versions

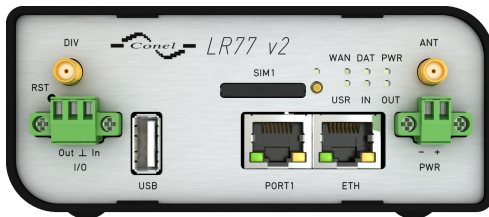


Figure 2: Front panel LR77 v2B(G)

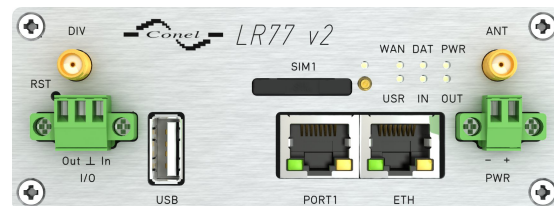


Figure 5: Front panel LR77 v2B(G) SL

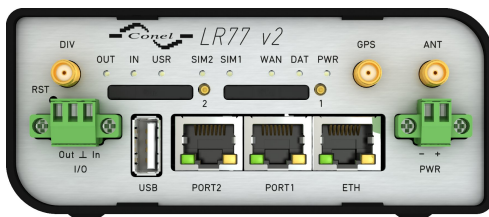


Figure 3: Front panel LR77 v2F(G)

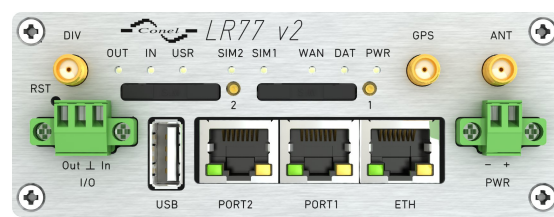


Figure 6: Front panel LR77 v2F(G) SL

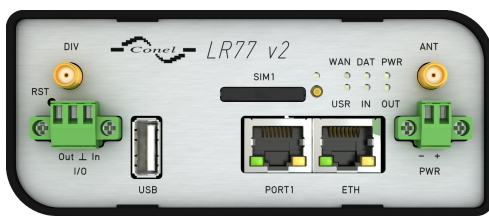


Figure 4: Front panel LR77 v2B L45

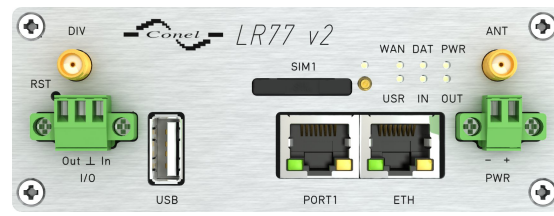


Figure 7: Front panel LR77 v2B L45 SL

5.2 Delivery identification

Trade name	Type name	Other
LR77 v2B(G)	LR-77-v2	Basic version
LR77 v2B(G) SL	LR-77-v2	Basic version in the metal box
LR77 v2F(G)	LR-77-v2	Full version
LR77 v2F(G) SL	LR-77-v2	Full version in the metal box
LR77 v2B L45	LR-77-v2	Basic version
LR77 v2B L45 SL	LR-77-v2	Basic version in the metal box

Table 2: Delivery identification



Figure 8: Label LR77 v2B

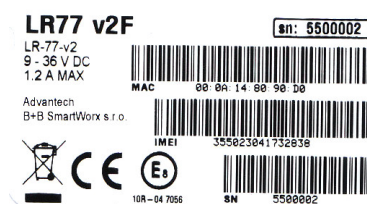


Figure 10: Label LR77 v2F



Figure 9: Label LR77 v2B SL

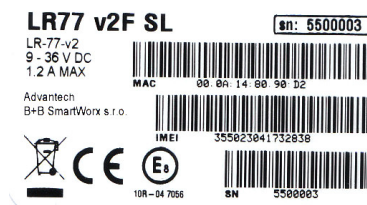


Figure 11: Label LR77 v2F SL

5.3 Order codes

5.3.1 Basic versions

Expansion port	Ordering code
Version without expansion port	LR77 v2B(G) / B L45 set
Version with Ethernet expansion port	LR77 v2B(G) / B L45 ETH set
Version with RS232 expansion port	LR77 v2B(G) / B L45 RS232 set
Version with RS485 expansion port	LR77 v2B(G) / B L45 RS458 set
Version with MBUS expansion port	LR77 v2B(G) / B L45 MBUS set
Version with CNT expansion port	LR77 v2B(G) / B L45 CNT set

Table 3: Ordering codes for Basic versions

5.3.2 Full version

Expansion port	Participation	Ordering code
Version without expansion port		LR77 v2F set
Version with Ethernet expansion port	PORT1	LR77 v2F(G) ETH set
Version with RS232 expansion port	PORT1 or PORT2	LR77 v2F(G) RS232 set
Version with RS485 expansion port	PORT1 or PORT2	LR77 v2F(G) RS458 set
Version with MBUS expansion port	PORT1 or PORT2	LR77 v2F(G) MBUS set
Version with CNT expansion port	PORT1	LR77 v2F(G) CNT set
Version with SWITCH expansion port	PORT1 + PORT2	LR77 v2F(G) SWITCH set
Version with WIFI expansion port	PORT2	LR77 v2F(G) WIFI set
Version with WMBUS expansion port	PORT2	LR77 v2F(G) WMBUS set
Version with SDH expansion port	PORT2	LR77 v2F(G) SDH set

Table 4: Ordering codes of full version

Code for the second expansion port must be written after the first port. See example below:

- Full version with Ethernet and RS232 port: **LR77 v2F ETH RS232 set.**
- Basic version for 450 MHz with RS232 port: **LR77 v2B L45 RS232 set.**
- Full version with Ethernet and RS232 port in metal cover:
LR77 v2F ETH RS232 SL set.

If you want to have a router with WIFI (or WMBUS) and GPS instead of diversity, use the ordering code in this form: **LR77 v2F(G)3**. WIFI connector is reverse as a standard (WMBUS connector is classic SMA as a standard). If you want to have a classic SMA connector (reverse SMA in case of WMBUS) use **LR77 v2F(G)4** for version with diversity antenna and **LR77 v2F(G)5** for version with GPS (i.e. no diversity).

5.4 Basic dimensions of the router box

5.4.1 Plastic box

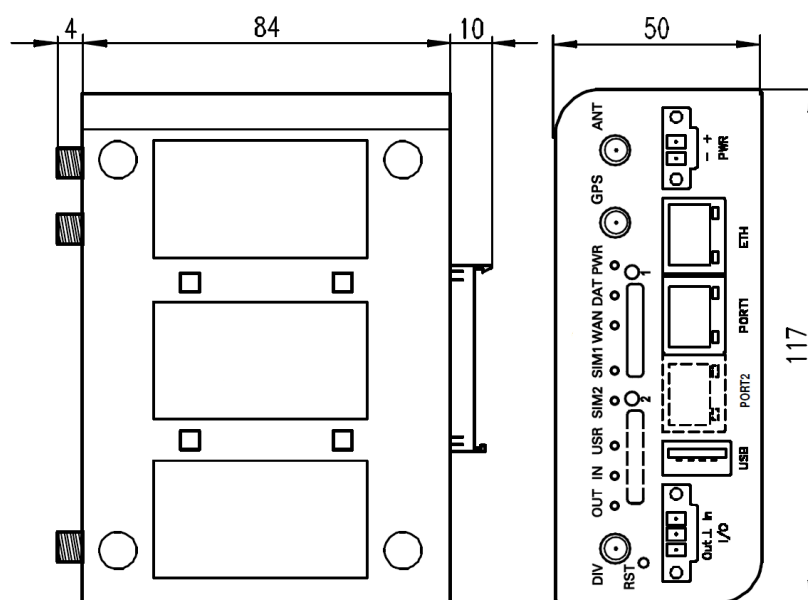


Figure 12: Basic dimensions of plastic box (bottom and front view)

5.4.2 Metal box

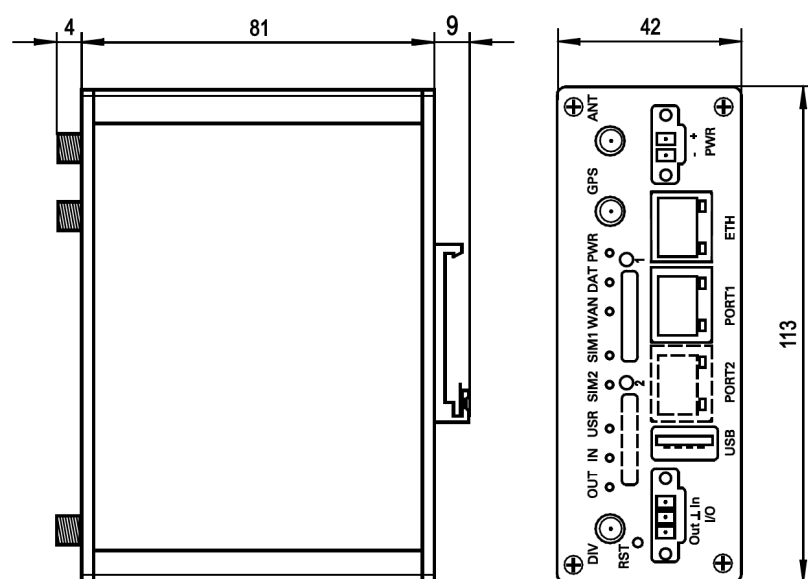


Figure 13: Basic dimensions of metal box (bottom and front view)

5.5 Mounting recommendations

- possibility to be put on a work surface,
- DIN rail EN 60715 with included plastic or metal clip.

For the most of applications with a built-in router in a switch board it is possible to recognize two kinds of environments:

- no public and industry environment of low voltage with high interference,
- public environment of low voltage without high interference.

For both of these environments it is possible to mount router to a switch board, the following there is no need to have examination immunity or issues in connection with EMC according to EN 60439-1 ed.2:00 + A1:04.



Attention: If the negative pole of the router is grounded, there is no protection against reversed polarity!



Compliance of EN 60439-1 ed.2:00 + A1:04 specification it is necessary to observe next assembly of the router to the switch – board:

- For whip antennas we recommend to observe a distance of 6 cm from cables and metal surfaces on every side due to the elimination of interference. While using an external antenna except for the switch-board it is necessary to fit a lightning conductor.
- Before mounting a router on sheet-steel we recommend using a "cable" antenna.

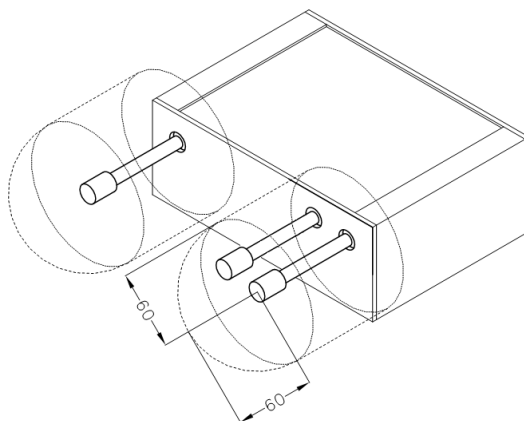
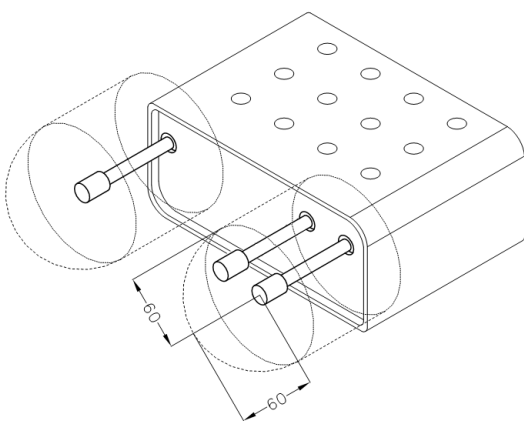


Figure 14: Space around antennas (plastic) Figure 15: Space around antennas (metal)

- For every cables we recommend to bind the bunch, we recommend for this use:
 - Length of the bunch (combination of power supply and data cables) can be maximum 1.5 m. If the length of data cables exceeds 1.5 m or in the event of, the cable leads towards the switch – board. We recommend installing over – voltage protectors (surge suppressors).
 - With data cables they mustn't carry cables with reticular tension ~ 230 V/50 Hz.

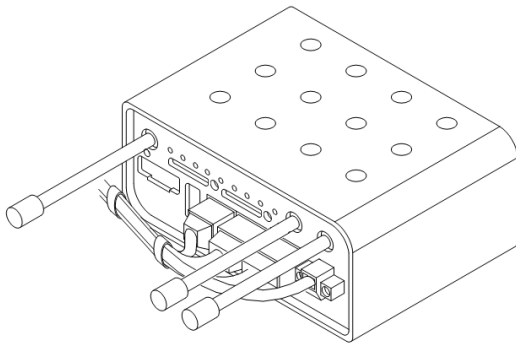


Figure 16: Cable routing (plastic)

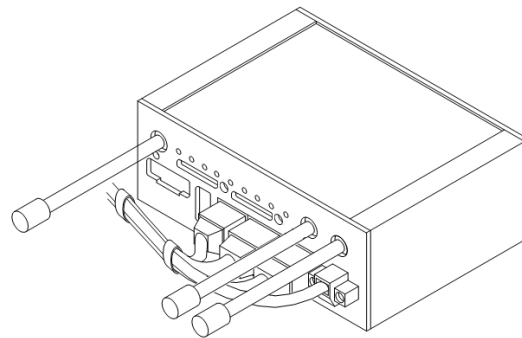


Figure 17: Cable routing (metal)

- Sufficient space must be left in front of individual connectors for handling of cables,

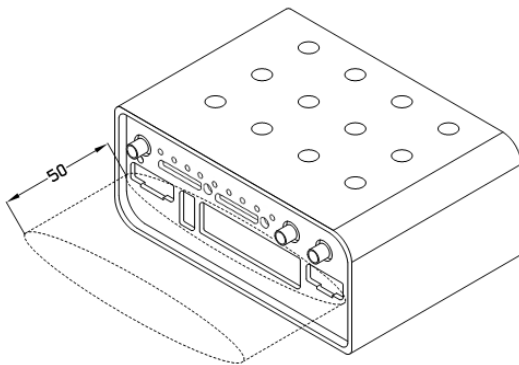


Figure 18: Space in front of connectors (plastic)

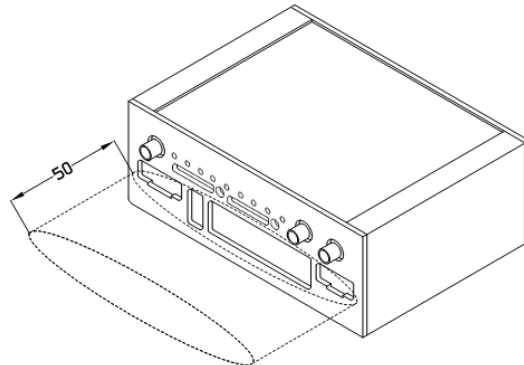


Figure 19: Space in front of connectors (metal)

- For correct function of the router we recommend to use in the switch-board earth-bonding distribution frame for grounding of power supply of router, data cables and antenna.

5.6 Removing from the DIN rail

DIN holder is suitable for DIN rail according to EN 60715 standard only. Default position of plastic or metal holder, which is used for mounting the router on a DIN rail, is shown in the following figure:

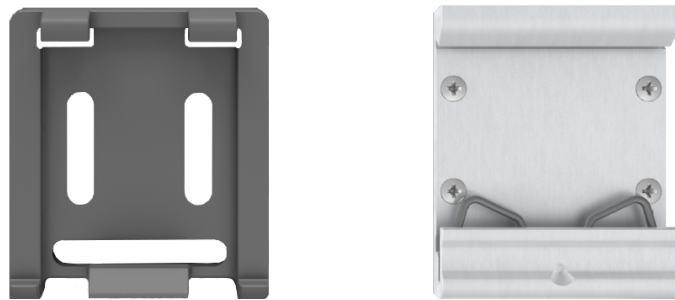


Figure 20: Default position of DIN holder

For removing from the DIN rail it is necessary to lightly push upward the router so that the top part of the DIN holder hitched to the DIN rail get out of this rail and then fold out the top part of the router away from the DIN rail.

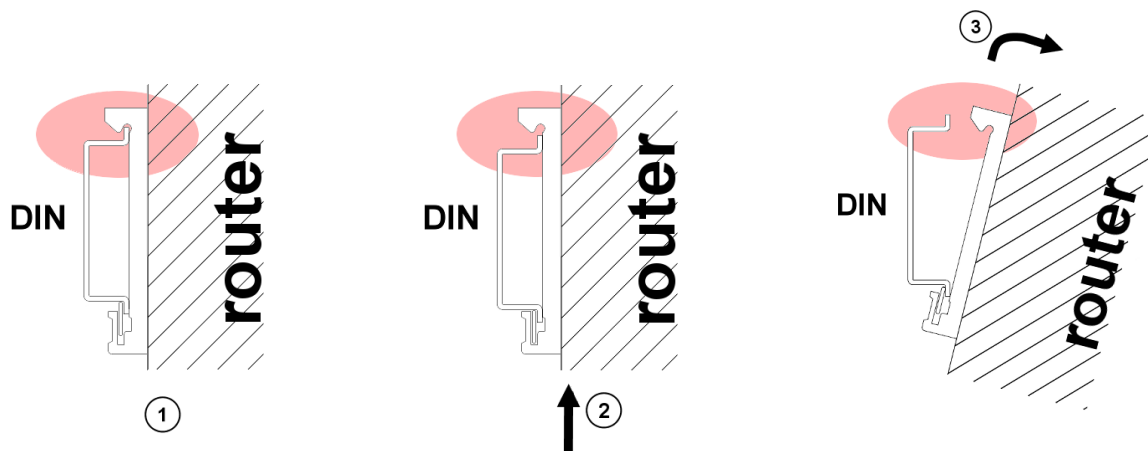


Figure 21: Removing from the DIN rail

5.7 Description of the front panel

On the front panel is the following:

Caption	Connector	Description
PWR	2-pin	Connector for the power supply.
ETH	RJ45	Connector for connection into the local computer network.
PORT1	RJ45	Connector for expansion port RS232, RS458/422, MBUS, ETHERNET, CNT or SWITCH.
PORT2	RJ45	Connector for expansion port RS232, RS485/422, MBUS, SWITCH, WIFI, WMBUS or SDH (only FULL versions).
ANT	SMA	Connector for main antenna.
DIV	SMA	Connector for diversity antenna.
GPS	SMA	Connector for GPS antenna. It can be replaced with connector for WIFI or WMBUS antenna.
WIFI	R-SMA	Connector for WIFI antenna. Available only when the router is equipped with an expansion port WIFI.
WMBUS	SMA	Connector for WMBUS antenna. Available only when the router is equipped with an expansion port WMBUS.
USB	USB-A Host	Connector for connection of USB devices to the router. Supports devices with PL-2303 and FTDI USB/RS232 converters.
I/O	3-pin	Connector for connection of the binary input and output.
SIM1	—	Holder for the first SIM card.
SIM2	—	Holder for the second SIM card (only FULL versions).

Table 5: Front panel description



Figure 22: Front panel LR77 v2F(G)

5.7.1 Status indication

About router status inform eight LED indicators on the front panel. ETH port, PORT1 and PORT2 have two additional LEDs that provide information about port status.

Caption	Color	State	Description
PWR	Green	Blinking On Fast blinking	Router is ready Starting of the router Updating firmware
DAT	Red	Blinking	Communication in progress on radio channel
WAN	Yellow	1x flash per sec. 2x flash per sec. 3x flash per sec.	Signal strength is from -50 dBm to -69 dBm Signal strength is from -70 dBm to -89 dBm or difference between neighbours cells is exactly 3 dBm Signal strength is from -90 dBm to -113 dBm or difference between neighbours cells is smaller than 3 dBm
USR	Yellow	Function of this LED diode can be selected by user	
OUT	Green	On	Binary output active
IN	Green	On	Binary input active
ETH	Green	On Off	Selected 100 Mbit/s Selected 10 Mbit/s
ETH	Yellow	On Blinking Off	The network cable is connected Data transmission The network cable is not connected
PORT	Green	Depends on the expansion port (see user's manual for used port)	
PORT	Yellow	Depends on the expansion port (see user's manual for used port)	
SIM1	Yellow	On	The first SIM card is active
SIM2	Yellow	On	The second SIM card is active

Table 6: Status indication



State indication of WAN LED is updated every 10 seconds.

5.7.2 Power connector PWR

Panel socket 2-pin.

Pin number	Signal mark	Description
1	VCC(+)	Positive pole of DC supply voltage (+9 to +36 V DC)
2	GND(-)	Negative pole of DC supply voltage

Table 7: Connection of power connector




Figure 23: Power connector

Power supply for router is required between +9 V to +36 V DC supply. Protection against reversed polarity without signaling is built into the router. **Note:** The protection against reversed polarity is lost if the negative pole is grounded!

The power consumption during receiving is 2.3 W. The peak power consumption during data sending is 5.5 W. However, values of consumption can be increased, if some expansion port is equipped. For correct operation it is necessary that the power source is able to supply a peak current of 1.2 A.

Circuit example:

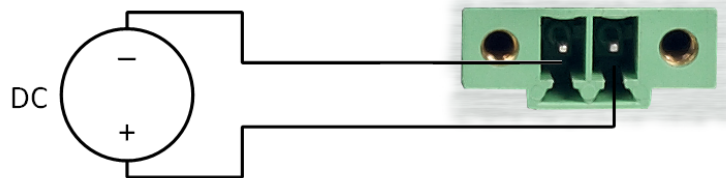


Figure 24: Connection of power supply



The positive pole VCC is marked by a red socket on the power.

5.7.3 Antenna connector ANT, DIV and GPS (alternatively WIFI or WMBUS)

Main and diversity antennas are connected to the router using the SMA connector on the front panel. Full version of the router also contains the third SMA antenna connector, through which the additional antenna can be connected (if WIFI expansion port is used, this connector is reverse – RSMA).



The router can not operate without connected main antenna marked as *ANT*!

ANT connector is used to connect the main antenna. For connecting the diversity antenna use the second antenna connector DIV. The third connector (GPS) in the full version of the router is used for additional antenna intended for GPS (router supports active GPS antenna). On user's request, this antenna connector can be modified to WIFI or WMBUS.



The antenna is connected by screwing this antenna to the SMA connector on the front panel of the router (see figure below).

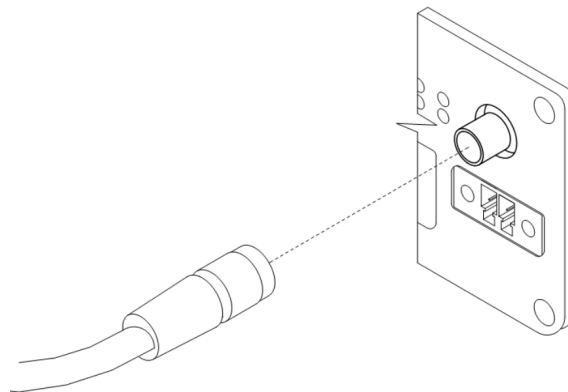


Figure 25: Connecting of the antenna



Diversity antenna improves radio features of the router at low signal strength.

5.7.4 SIM card reader

The SIM card reader for 3 V and 1,8 V SIM cards is placed on the front panel of the router. For getting the router to work is necessary to insert an activated SIM card with an unblocked PIN code. The SIM cards might be of different adjusted APN (Access Point Name).

Changing the SIM card:

- Before handling of the SIM card disconnect the router from power supply!
- Press the small yellow button to eject the reader holder.
- Insert the SIM card into the reader holder and slide it in the reader (see figure below).

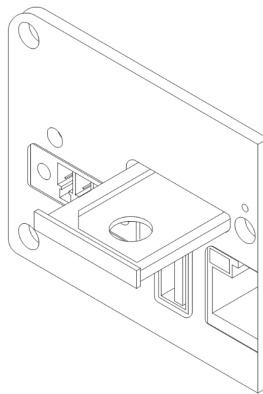


Figure 26: Ejected SIM holder

5.7.5 Ethernet Port ETH

Panel socket RJ45.

Pin	Signal mark	Description	Data flow direction
1	TXD+	Transmit Data – positive pole	Input/Output
2	TXD-	Transmit Data – negative pole	Input/Output
3	RXD+	Receive Data – positive pole	Input/Output
4	—	—	
5	—	—	
6	RXD-	Receive Data – negative pole	Input/Output
7	—	—	
8	—	—	

Table 8: Connection of Ethernet connector

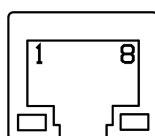


Figure 27: Ethernet connector



ATTENTION! ETH port is not POE (Power Over Ethernet) compatible!

Plug Ethernet cable into the RJ45 connector labeled as ETH (see figure below).

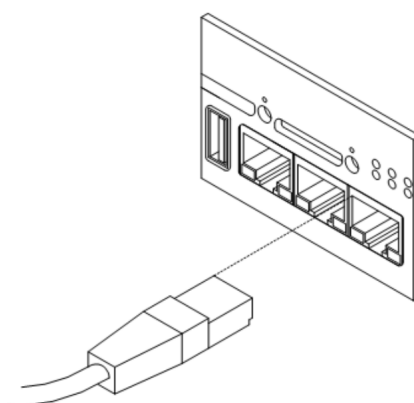


Figure 28: Connection of ethernet cable

5.7.6 PORT1

The PORT1 is equipped on customer's request with one of the offered expansion ports:

- RS232
- RS485
- RS422
- ETHERNET
- MBUS
- CNT
- SWITCH (together with PORT2)



Description and examples of expansion ports connection can be found in user's guide for corresponding expansion port.

Plug cable for the first expansion port into the RJ45 connector labeled as PORT1 (see figure below).

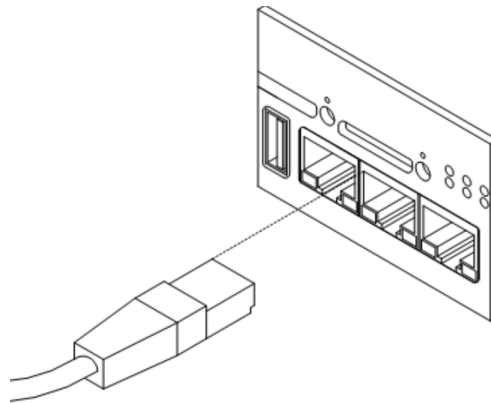


Figure 29: PORT1 cable connection

5.7.7 PORT2

The PORT2 is equipped on customer's request with one of the offered expansion ports:

- RS232
- RS485
- RS422
- MBUS
- SDH
- SWITCH (together with PORT1)
- WIFI
- WMBUS



PORT2 is available only in the Full version of the router! Description and examples of expansion ports connection can be found in user's guide for corresponding expansion port.

Plug cable for the second expansion port into the RJ45 connector labeled as PORT2 (see figure below).

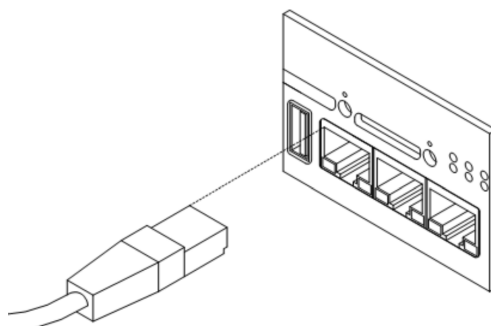


Figure 30: PORT2 cable connection

5.7.8 USB Port

Panel socket USB-A.

Pin	Signal mark	Description	Data flow direction
1	+5 V	Positive pole of 5 V DC supply voltage, 0.5 A	
2	USB data -	USB data signal – negative pole	Input/Output
3	USB data +	USB data signal – positive pole	Input/Output
4	GND	Negative pole of DC supply voltage	

Table 9: Connection of USB connector



Figure 31: USB connector

5.7.9 I/O Port

Panel socket 3-pin.

Pin	Signal mark	Description	Data flow direction
1	BIN0	Binary input	Input
2	GND	Signal ground	
3	OUT0	Binary output	Output

Table 10: Connection of I/O port




Figure 32: I/O connector

I/O user interface is designed for processing of binary input and control (setting) binary output. Binary output is not switched to ground in the default configuration. Maximum load binary output is 30 V / 100 mA. The constant current supplied by the binary input is 3 mA.

Connect I/O cable into the I/O connector on the front panel of the router and tighten locking screws (see figure below).

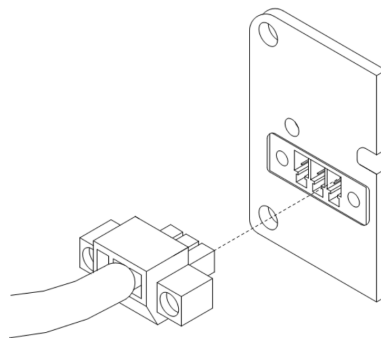


Figure 33: Connection of I/O cable

Example of a circuit describing connection of binary input and output to the router:

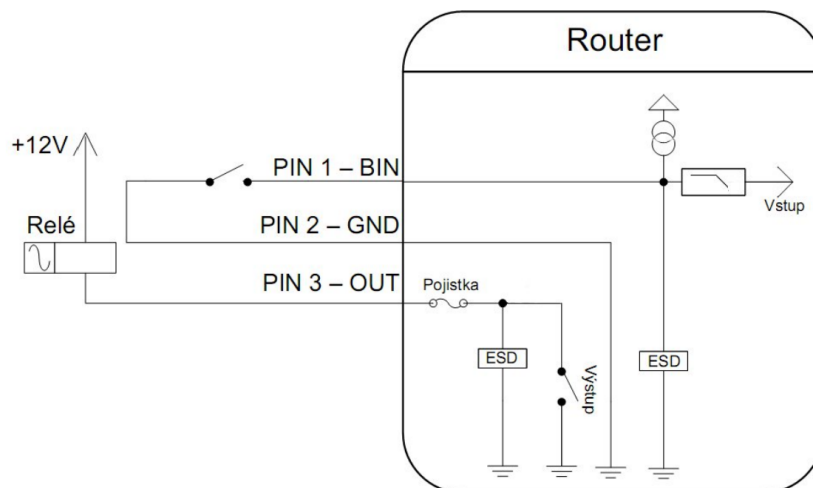


Figure 34: Connection of input and output to the router

5.7.10 Reset

When *PWR* LED starts flashing on the front panel, it is possible to restore the default configuration of the router by pressing the *RST* button on the front panel. After pressing this button the default configuration is restored and then router reboots (green LED will be on).



For pressing the *RST* button could be used a narrow screwdriver.

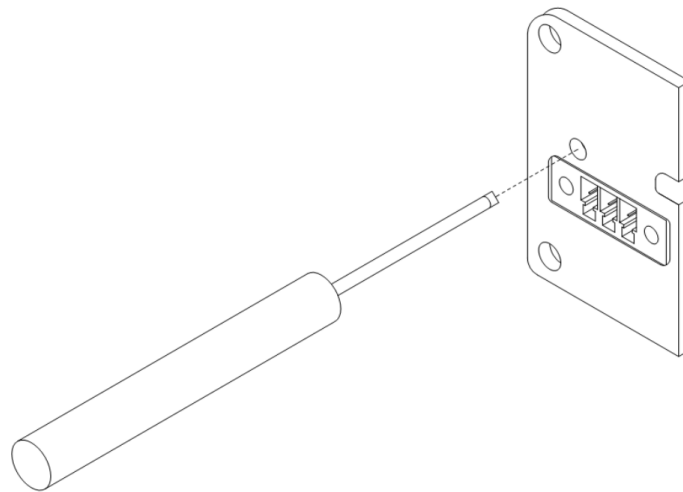


Figure 35: Router reset



We recommend backing up configuration of the router (see *Configuration manual for v2 routers*) because reset of the router sets the configuration to the default state.

It is important to distinguish between reset and reboot the router.

Action	Router behavior	Invoking events
Reboot	Turn off and then turn on router	Disconnect and connect the power, Press the <i>Reboot</i> button in the web configuration
Reset	Restore default configuration and reboot the router	Press <i>RST</i> button

Table 11: Description of reset and restart router

6. First Use

6.1 Connecting the router before first use

Before putting the router into operation it is necessary to connect all components which are required to run your applications. Don't forget to insert SIM card.



The router can not operate without connected antenna, SIM card and power supply. If the antenna is not connected, router can be damaged.

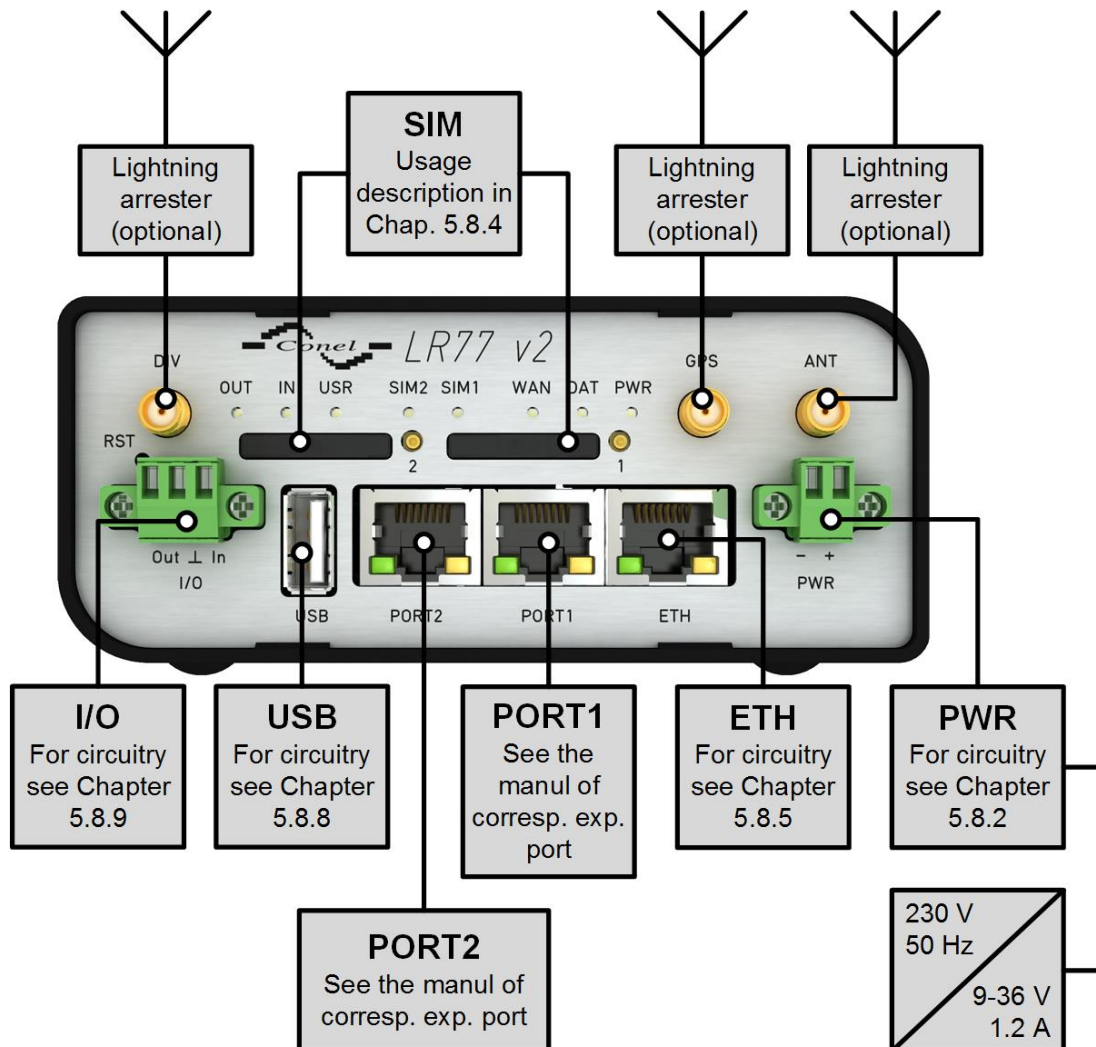


Figure 36: Router connection

6.2 Start

The router is put into operation when the power supply is connected to this router. By default, the router will automatically start to log on to the default APN. DHCP server will start to assign addresses for devices on the Ethernet port ETH0. Router behavior can be changed via the web interface. This is described in detail in the *Configuration manual*.

The power consumption during receiving is 2.3 W. The peak power consumption during data sending is 5.5 W. However, values of consumption can be increased, if some expansion port is equipped. For correct operation it is necessary that the power source is able to supply a peak current of 1 A.

6.3 Configuration



Attention! If no SIM card is inserted in the router, it is not possible to operate. Inserted SIM card must have activated data transmission.

6.3.1 Configuration over web browser

For status monitoring, configuration and administration of the router is available a web interface which can be accessed by entering the IP address of the router into the web browser. The default IP address of the router is 192.168.1.1.

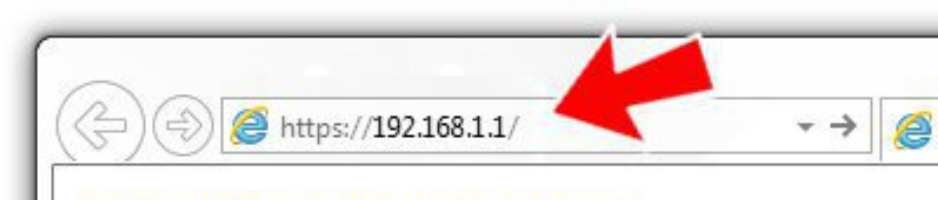


Figure 37: Entering the IP address of the router

Configuration may be performed only by the user "root" with default password "root".

Figure 38: Entering login information

After successfully entering login information user gains access to the router via his internet browser.

Status	General Status
General	Mobile Connection
Mobile WAN	SIM Card : Primary
WiFi	IP Address : Unassigned
WiFi Scan	State : Offline
Network	> More Information <
DHCP	Primary LAN
IPsec	IP Address : 10.40.28.66 / 255.255.252.0
DynDNS	MAC Address : 7C:66:9D:38:30:F0
System Log	Rx Data : 4.2 MB
	Tx Data : 140.8 KB
	Bridged : Yes
	> More Information <
Configuration	Secondary LAN
LAN	IP Address : 10.40.28.66 / 255.255.252.0
VRRP	MAC Address : 7C:66:9D:38:30:F0
Mobile WAN	Rx Data : 0 B
PPPoE	Tx Data : 0 B
WiFi	Bridged : Yes
WLAN	> More Information <
Backup Routes	WiFi
Firewall	IP Address : Unassigned
NAT	MAC Address : 78:A5:04:22:2A:67
OpenVPN	> More Information <
IPsec	Peripheral Ports
GRE	Expansion Port 1 : RS-232
L2TP	Expansion Port 2 : RS-485
PPTP	Binary Input 0 : Off
DynDNS	Binary Input 1 : Off
NTP	Binary Output : Off
SNMP	System Information
SMTTP	Firmware Version : 5.3.0 (2015-10-01) BETA #120
SMS	Serial Number : N/A
Expansion Port 1	Profile : Standard
Expansion Port 2	Supply Voltage : 12.0 V
USB Port	Temperature : 38 °C
Startup Script	Time : 2008-05-16 00:57:08
Up/Down Script	Uptime : 0 days, 0 hours, 39 minutes
Automatic Update	
Customization	
User Modules	
Administration	
Users	
Change Profile	
Change Password	
Set Real Time Clock	
Set SMS Service Center	
Unlock SIM Card	
Send SMS	
Backup Configuration	
Restore Configuration	
Update Firmware	
Reboot	
Logout	

Figure 39: Router web interface



A detailed description of the router settings via the Web interface can be found in the document *Configuration manual for v2 routers*.

6.3.2 Configuration over Telnet

For status monitoring, configuration and administration of the router can be also used Telnet. After entering the IP address of the router you will be allowed to configure the router using commands. The default IP address of the router is 192.168.1.1. Configuration may be performed only by the user "root" with default password "root".



A detailed description of the router settings via the Telnet can be found in the document *Configuration manual for v2 routers*.

7. Technical Parameters

7.1 Basic parameters

LR77 v2		
Temperature range	Operating Storage	-40 °C to +75 °C* -40 °C to +85 °C
Humidity	Operating Storage	0 to 95 % relative humidity non condensing 0 to 95 % relative humidity non condensing
Altitude	Operating	2000 m / 70 kPa
Degree of protection		IP30
Supply voltage		9 to 36 V DC
Consumption	Idle GPRS LTE	2.3 W to 3.5 W (GPRS transmission) to 5.5 W (LTE transmission)
Dimensions	Plastic box Metal box	51 x 87 x 116 mm (DIN 35 mm) 42 x 87 x 113 mm (DIN 35 mm)
Weight		LR77 v2 – 150 g LR77 v2 SL – 280 g
Antenna connector		3x SMA – 50 Ohm
User interface	ETH USB PORT1 PORT2	Ethernet (10/100 Mbit/s) USB 2.0 On customer's request On customer's request

Table 12: Basic parameters



* Temperature range for routers supporting 450 MHz is reduced to -20 °C to +60 °C!

7.2 Standards and regulations

The router complies with the following standards and regulations.

7.2.1 Versions LR77 v2B and LR77 v2F

Versions LR77 v2B and LR77 v2F	
Telecom and emission	ETSI EN 301 511 v9.0.2, ETSI EN 301 908-1 v5.2.1, ETSI EN 301 908-2 v5.2.1, ETSI EN 301 908-13 v5.2.1
EMC	ETSI EN 301 489-1 v1.9.2
Safety	EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013, EN 62311:2008
E8 – EMC for devices in transportation	E8 homologation number: 10R – 04 7056

Table 13: Versions LR77 v2B and LR77 v2F

7.2.2 Versions LR77 v2BG and LR77 v2FG

Versions LR77 v2BG and LR77 v2FG	
Telecom and emission	ETSI EN 301 511 v9.0.2, ETSI EN 301 908-1 v5.2.1, ETSI EN 301 908-2 v5.2.1, ETSI EN 301 908-13 v5.2.1
EMC	ETSI EN 301 489-1 v1.9.2
Safety	EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013, EN 62311:2008

Table 14: Versions LR77 v2BG and LR77 v2FG

7.2.3 Versions LR77 v2B L45

Versions LR77 v2B L45	
Telecom and emission	ETSI EN 301 908-1 v6.2.1, ETSI EN 301 908-13 v6.2.1, ETSI EN 301-489-24 v1.5.1
EMC	ETSI EN 301 489-1 v1.9.2
Safety	EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013, EN 62311:2008

Table 15: Versions LR77 v2B L45

7.3 Technical parameters of module

7.3.1 Versions LR77 v2B and LR77 v2F

LTE module for versions LR77 v2B and LR77 v2F	
LTE parameters	Bit rate 100 Mbps (DL) / 50 Mbps (UL), UE CAT. 3 3GPP rel. 9 standard Supported bandwidths: 5 Mhz, 10 Mhz, 20 Mhz Supported frequencies: 800 / 900 / 1800 / 2100 / 2600 MHz
HSPA+ parameters	Bit rate 42 Mbps (DL) / 5,76 Mbps (UL), UE CAT. 24, 6 3GPP rel. 5, 6, 7, 8 standard Supported frequencies: 850 / 900 / 1900 / 2100 MHz
UMTS parameters	PS bit rate 384 kbps (DL) / 384 kbps (UL) 3GPP rel. 5, 6, 7, 8 standard W-CDMA FDD standard Supported frequencies: 850 / 900 / 1900 / 2100 MHz
GPRS/EDGE parameters	Data throughput max. 236 kbps 3GPP rel. 99 standard GPRS multislot class 10 EDGE multislot class 12 Coding schemes CS 1 to 4, MCS 1 to 9 Supported frequencies: 850 / 900 / 1800 / 1900 MHz
Supported GPRS/EDGE power classes	GSM 850 CS: Class 4 (32 dBm) EGSM 900 CS: Class E2 (27 dBm) DCS 1800 CS: Class 1 (29 dBm) PCS 1900 CS: Class E2 (26 dBm)

Table 16: Versions LR77 v2B and LR77 v2F

7.3.2 Versions LR77 v2BG and LR77 v2FG

LTE module for versions LR77 v2BG and LR77 v2FG	
LTE parameters	Bit rate 100 Mbps (DL) / 50 Mbps (UL) 3GPP rel. 8 standard Supported bandwidths: 5 MHz, 10 MHz, 20 MHz Supported frequencies: 800 / 900 / 1800 / 2100 / 2600 MHz
HSPA+ parameters	Bit rate 42 Mbps (DL) / 5,76 Mbps (UL) 3GPP rel. 7 standard UE CAT. 1 to 6, 8, 10, 12, 14 3GPP data compression Supported frequencies: 900 / 1800 / 2100 MHz

Continued on next page

Continued from previous page

LTE module for versions LR77 v2BG and LR77 v2FG	
UMTS parameters	PS bit rate 384 kbps (DL) / 384 kbps (UL) CS bit rate 64 kbps (DL) / 64 kbps (UL) W-CDMA FDD standard Supported frequencies: 900 / 1800 / 2100 MHz
GPRS/EDGE parameters	Bit rate 237 kbps (DL) / 59,2 kbps (UL) GPRS multislot class 10, CS 1 to 4 EDGE multislot class 12, CS 1 to 4, MCS 1 to 9 Supported frequencies: 900 / 1800 MHz
Supported GPRS/EDGE power classes	EGSM 900: Class 4 (33 dBm) GSM 1800: Class 1 (30 dBm) EDGE 900: Class E2 (27 dBm) EDGE 1800: Class E2 (26 dBm)

Table 17: Versions LR77 v2BG and LR77 v2FG

7.3.3 LTE module supports 450 MHz

LTE module supports 450 MHz	
LTE parameters	Bit rate 100 Mbps (DL) / 50 Mbps (UL), UE CAT. 3 3GPP rel. 9 standard Supported bandwidths: 5 Mhz, 10 Mhz, 20 Mhz Supported frequencies: 450 / 800 / 1800 / 2600 MHz Rated Output Power: B3, B7, B20, 31 MIMO (Multi-Input Multi-Output) antenna support
HSPA+ parameters	Bit rate 42 Mbps (DL) / 5,76 Mbps (UL), UE CAT. 24, 6 3GPP rel. 5, 6, 7, 8 standard Supported frequencies: 900 / 2100 MHz A maximum of ten HS-PDSCH channels
UMTS parameters	PS bit rate 384 kbps (DL) / 384 kbps (UL) 3GPP rel. 5, 6, 7, 8 standard W-CDMA FDD standard Supported frequencies: 900 / 2100 MHz Rated Output Power: Class 3 (900 MHz and 2100 MHz)
GPRS/EDGE parameters	3GPP rel. 99 standard; Multislot Class 12 Coding schemes CS 1 to 4, MCS 1 to 9 Supported frequencies: 900 / 1800 MHz Rated Output Power GSM/GPRS 900 MHz: Class 4 Rated Output Power GSM/GPRS 1800 MHz: Class 1 Rated Output Power EDGE 900 / 1800 MHz: Class E2

Table 18: Technical parameters of LTE module 450 MHz

7.4 Technical parameters of GPS



GPS is not available when the router is equipped with the LTE module 450 MHz!

GPS specifications	
Antenna	50 Ohms – active
Protocols	NMEA 0183 v3.0
Frequency	1575.42 MHz
Sensitivity	Tracking: -161 dBm* Acquisition (Assisted): -158 dBm** Acquisition (Standalone): -145 dBm**
Acquisition time	Hot start: 1 s Warm start: 29 s Cold start: 32 s
Accuracy	Horizontal: < 2m (50 %); < 5 m (90 %) Altitude: < 4 m (50 %); < 8 m (90 %) Velocity: < 0.2 m/s

Table 19: Technical parameters of GPS

* Tracking sensitivity is the lowest GPS signal level for which the device can still detect an in-view satellite 98 % of the time when in sequential tracking mode.

** Acquisition sensitivity is the lowest GPS signal level for which the device can still detect an in-view satellite 50 % of the time.

7.5 Technical parameters of processor

32b ARM microprocessor	
Memory	512 Mb DDR SDRAM 128 Mb FLASH 1 Mb MRAM
Interface	Serial interface RS232 Ethernet interface 10/100 Mbit/s USB 2.0 interface

Table 20: Technical parameters of processor

7.6 Technical parameters of I/O port

Binary input and output		
Input/Output	Binary input Binary output	Reed contact with trigger level 1.3 up to 1.4 V 100 mA / max. 30 V

Table 21: Technical parameters of I/O port

7.7 Technical parameters of expansion port

Technical parameters of expansion ports are provided in separate manuals.

8. Recommended Literature

- [1] Advantech B+B SmartWorx: **Start guide for v2 routers,**
- [2] Advantech B+B SmartWorx: **Configuration manual for v2 routers,**
- [3] Advantech B+B SmartWorx: **User's manual – Expansion port RS232,**
- [4] Advantech B+B SmartWorx: **User's manual – Expansion port RS485/422,**
- [5] Advantech B+B SmartWorx: **User's manual – Expansion port MBUS,**
- [6] Advantech B+B SmartWorx: **User's manual – Expansion port CNT,**
- [7] Advantech B+B SmartWorx: **User's manual – Expansion port ETH,**
- [8] Advantech B+B SmartWorx: **User's manual – Expansion port SWITCH,**
- [9] Advantech B+B SmartWorx: **User's manual – Expansion port WIFI,**
- [10] Advantech B+B SmartWorx: **User's manual – Expansion port WMBUS,**
- [11] Advantech B+B SmartWorx: **User's manual – Expansion port SD,**
- [12] Advantech B+B SmartWorx: **Application note – Expansion port mounting,**
- [13] Advantech B+B SmartWorx: **Application note – Programmer guide.**

9. Troubleshooting



If you can not connect to the router from your PC, your network card may be configured the way it is not possible to connect to the router. Take one or more of the following steps to solve the problem:

- Select the communication rate 10 MB/s in the properties of your network card.
- Connect the router to the PC via Switch.
- Connect the router to the PC, start the router first and then start the PC after the router's initialization.

9.1 FAQ

 **I have NAT enabled. My equipment is not connecting to the network.**

- *The device's gateway has to be configured as the router.*

 **The router resets itself and the Ethernet connection fails.**

- *The router will not function without an antenna. Keep the antenna as far as possible from the power supply.*

 **I can't access the Web server over NAT.**

- *The remote HTTP access of the router has to be disabled, the default server address has to be your web server and the gateway of the web server has to be the IP of the router.*

 **Mobile WAN connection fails. (DAT LED off)**

- *Check signal power. If the signal power is weak, you will have to use a better antenna. If the neighboring cells have a similar signal strength, you will need to use a directional antenna. For proper operation, the signal levels have to be in the range from -50 dBm to -90 dBm.*
- *It is necessary to set ping, which will check the connection and, in the case of failed ping, restart connection.*

 **Mobile WAN connection cannot be established. (DAT LED off)**

- *Recheck GPRS settings – APN, name, password and IP address.*
- *Try to enter PIN – verify if the SIM card has the PIN code set.*
- *In a private APN, switch the DNS server send off.*
- *Switch the system log on and observe where the error occurs.*

 Ethernet connection fails or isn't establishing.

- *It is possible to turn auto negotiation off and set a rate and duplex manually on the Ethernet interface of the router.*

 DynDNS doesn't function.

- *With private APN this is not functional.*
- *If the same IP address is recorded in your canonic name as dynamically assigned address, it means that the operator is using NAT or firewall.*
- *Verify NAT using ping to the static server address.*
- *Verify Firewall accessing remotely to the router's Web interface.*
- *The operator may not provide the address of DNS server and without DNS server's adress it is impossible to connect to the dyndns.org server. There will be these messages in the system log:*
 - *DynDNS daemon started*
 - *Error resolving hostname: no such file or directory*
 - *Connect to DynDNS server failed*

 L2TP or IPSec isn't establishing.

- *Check the system log for error messages.*

 I switched the router to offline mode by SMS message, but the router is in online mode after restart.

- *SMS messages do not change the router configuration. They remain in effect only until the router is restarted.*

 FTP doesn't function.

- *Router doesn't support active FTP mode. It supports passive mode only.*

 RS232 doesn't function.

- *Verify that the router supports RS232 communications. Also verify the RS232 communication settings. To do so, open the router's configuration menu via the web browser, select the appropriate expansion port and verify the settings in the configuration menu.*

10. Customers Support

You can find current information about this product on our website:

www.bb-smartcellular.eu



Upkeep-advice:

- The SIM-card must be handled carefully as with a credit card. Don't bend, don't scratch on this and do not expose to static electricity.
- During cleaning of the router do not use aggressive chemicals, solvents and abrasive cleaners!

Advantech B+B SmartWorx s.r.o. hereby declares that the router narrated in this user's guide fits all basic demands of directive 1999/5/EC (R&TTE).

Router fits values of coefficient SAR defined by association ICNIRP and values of "About protection of health before non-ionized radiation".



Declaration of Conformity was issued and it is possible to find it on the Advantech B+B SmartWorx website (www.bb-smartcellular.eu/download) in respective product category or is available on request from producer.